


Cytomegalovirus Work Flow

Tubes vs. Tubeless

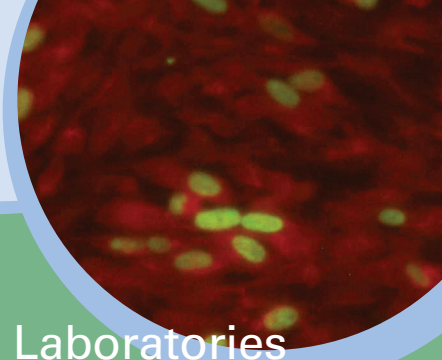

Going Totally Tubeless™ Provides Benefits for All Laboratories

Tubes


Total time to completion: **3-21 Days**



- Longer culture time to negative reporting; 21 days!
- Highly trained staff required for interpretation of cytopathic effect

DAYS

Tubes Work Flow

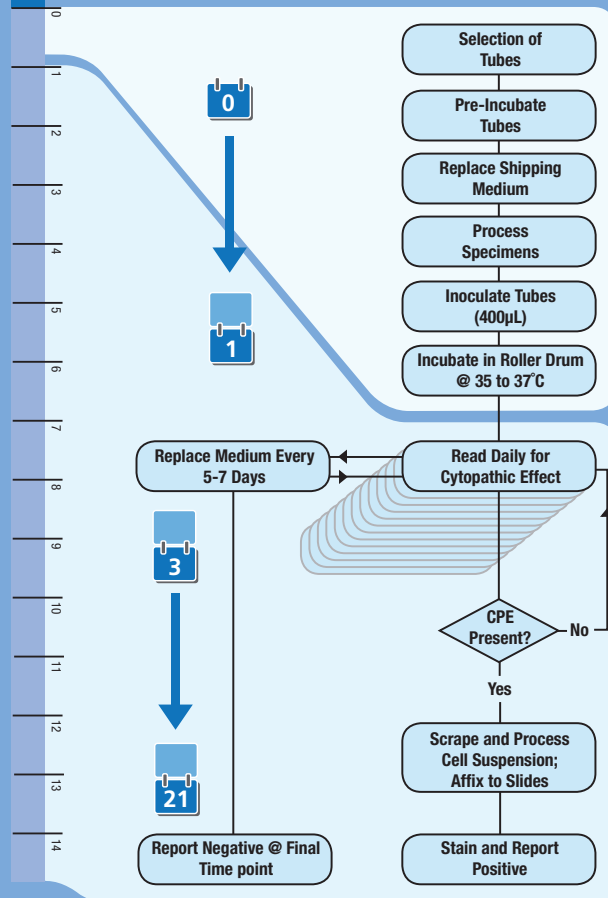

Total time to Completion: 3-21 Days

Totally Tubeless


Total time to completion: **16-48 Hours**



- Much shorter time to negative report; 48 hours
- No CPE Interpretation required

HOURS

Totally Tubeless Work Flow

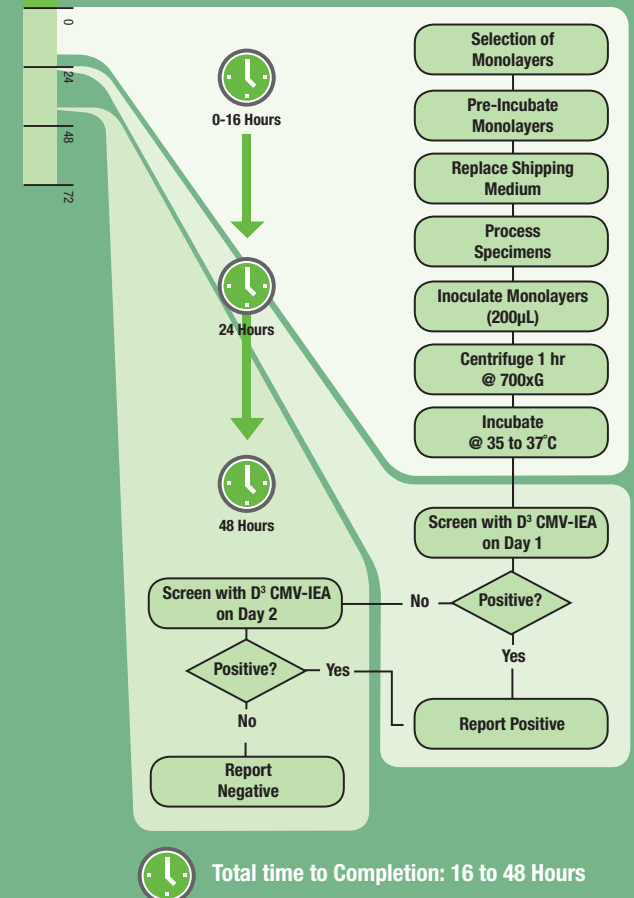

Total time to Completion: 16 to 48 Hours